

Sinclair & Rush

Global Manufacturer of Plastic, Rubber & Foam Components

Insert Measuring Guide

How to Measure Your Tube Insert Requirements

At Sinclair & Rush, all of our measurements listed for our Tube Inserts are the OUTSIDE measurements.



How to Choose Your Part (as seen beside)...

Select the Outside Diameter Required. This will generate the wall thickness we offer that part in (you may be able to change this; if it is greyed out, this is unable to be changed). Please also ensure you select the correct colour you require; your option is identified by the tick in the centre of the chosen colour.

How to Measure o The outside dimensions are taken from one



Simple Calculation 16mm (OD) - 14mm (ID) ÷ 2 = 1mm (WT)

Based on RTI554

Call us on 01634 686504 or visit our website at www.sinclair-rush.co.uk

outside wall to the other. (20mm as shown on the correct side)

The best way to

calculate the wall

the inside from the

outside measurement

and divide by two.